


Spoiler mounting Instructions for '70 GTO

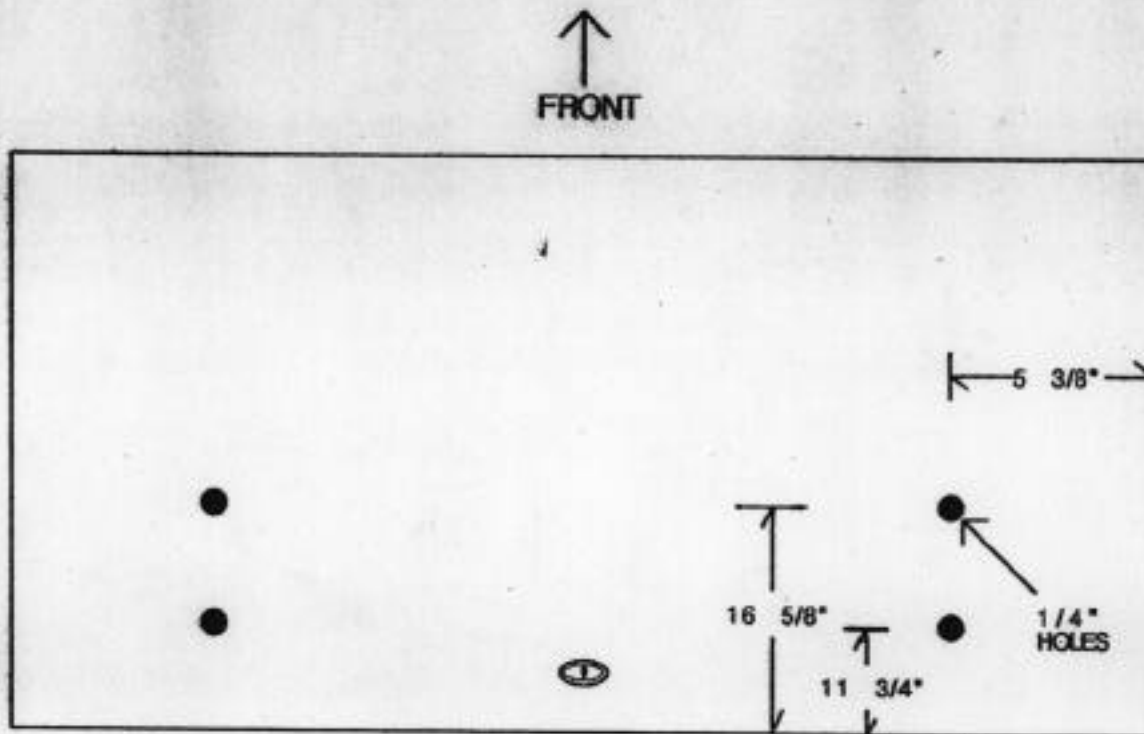

Measurements are taken using the edge of the deck lid above the taillights as the starting point. Follow the contour of the decklid with a measuring tape to the correct dimension. Drill a 1/4" hole for the studs.

NOTE: You may need to drill a 1" hole in the understructure of the decklid to allow for a hex-nut to mount the spoiler. Use the 1/4" hole that you've drilled in the top as a pilot hole.

If you have any further questions, please call our tech line at (603)-876-4514

Thank You,

Ames Performance Engineering